



# Nikon Coolpix S8200 CCD Lens Replacement

Replacing the CCD lens inside of the camera, which is the part that actually takes the picture.

Written By: Nelson Antiposti




## Step 1 — CCD Lens




- First, you must unscrew the back part of the case off. This requires you to unscrew the screws on the bottom, left, and right side. Be careful, there are parts that have hidden screws under flippable parts, like this one.

## Step 2

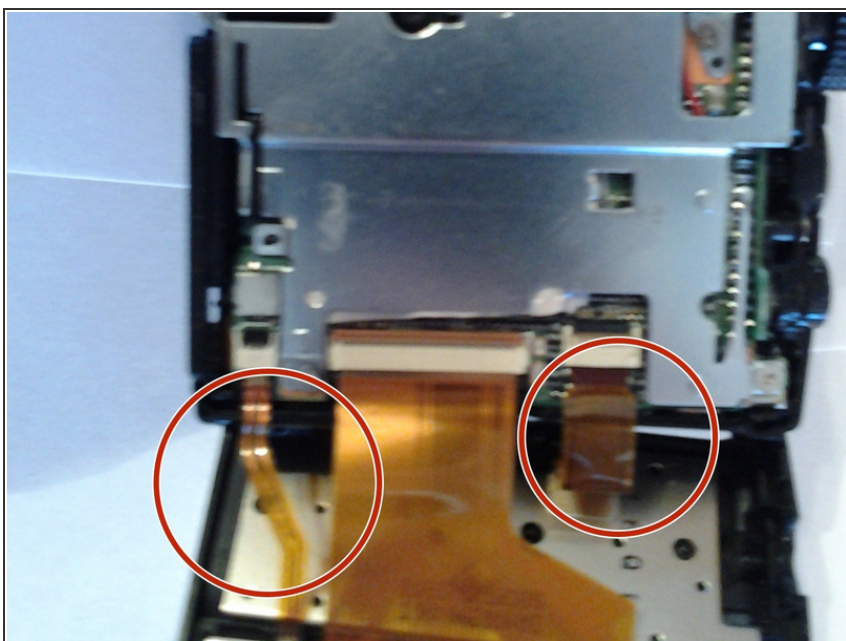

- Once the back has come off, you do NOT have to take off the ribbon cables. They can stay on the device, attached to the back and main part of the camera.

## Step 3

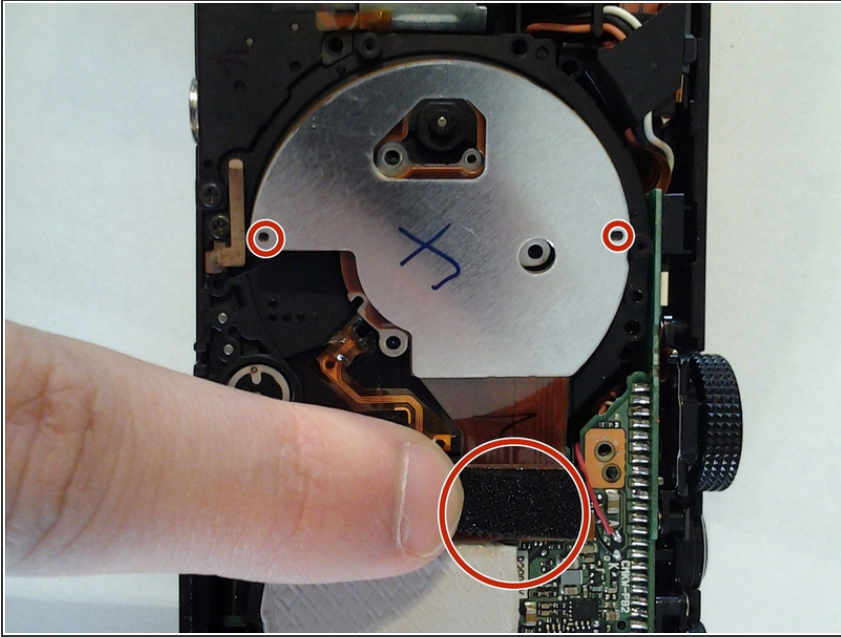

- Once the back has been taken off, unscrew the screws around the silver disk-like part, then removed them, then gently take off this black strap. It can snap back on.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 12:03:51 AM.